

CFS-X Lubrication Controller

3A9528A

EN

For controlling and monitoring an automated lubrication system. For professional use only.

Not approved for use in explosive atmospheres or hazardous (classified) locations.

Model CFS-X

Part No. 2006775



Important Safety Instructions

Read all warnings and instructions in this manual before using the equipment. Be familiar with the proper control and usage of the equipment. Save these instructions.



ti02976a

Contents

Safety Symbols	3	Recycling and Disposal	20
General Warnings	4	End of Product Life	20
Component Identification	6	Troubleshooting	21
System LED (A)	6	Dimensions	22
Low Level Status LED (B)	6	Mounting Hole Layout	23
UP and DOWN Direction Arrows (D and E) ..	6	Electrical Schematics	24
RIGHT Direction Arrow / MANUAL RUN /		Wiring Diagram	24
ENTER (F)	6	Wiring Key	24
LEFT Direction Arrow / Reset (G)	6	Sensor Wiring Configurations	25
Typical Installation	8	Dry Contact Switch	25
System Configuration	9	Analog Sensor	25
Injector System	9	Source/PNP Switch (2 or 3 Wire Type)	25
Divider Valve	10	Technical Specifications	26
Installation	11	Compliance	27
Mounting	11	Radio Frequency Approvals	27
Wiring	11	Warranty	28
Setup	12		
Navigating Setup and Data Entry	12		
Change Settings	12		
Mode	12		
End On	13		
Low Level	13		
Paddle	13		
Switch	14		
Sensor	14		
Lock	14		
Enable a Lock out PIN	14		
Entering a PIN	14		
Start Up	14		
Output 2	14		
System	14		
Date and Time	14		
Program Settings	15		
Operation	16		
Main Screens	16		
Test Mode	17		
Alarms	17		
Low Level Alert State	17		
Low Level Alarm State	17		
Clear Alarm Buzzer	17		
Clear Low Level Alarm	17		
Alarm Types	18		

Safety Symbols

The following safety symbols appear throughout this manual and on warning labels. Read the table below to understand what each symbol means.

Symbol	Meaning
	Equipment Misuse Hazard
	Moving Parts Hazard
	Skin Injection Hazard
	Skin Injection Hazard
	Splatter Hazard
	Do Not Place Hands or Other Body Parts Near Fluid Outlet
	Do Not Stop Leaks with Hand, Body, Glove or Rag
	Follow Pressure Relief Procedure
	Read Manual
	Wear Personal Protective Equipment











Safety Alert Symbol

This symbol indicates: Attention! Become Alert! Look for this symbol throughout the manual to indicate important safety messages.

General Warnings

The following warnings apply throughout this manual. Read, understand, and follow the warnings before using this equipment. Failure to follow these warnings can result in serious injury.

 WARNING	
<div style="display: flex; flex-direction: column; gap: 10px;">      </div>	<p>SKIN INJECTION HAZARD</p> <p>High-pressure fluid from dispensing device, hose leaks, or ruptured components will pierce skin. This may look like just a cut, but it is a serious injury that can result in amputation. Get immediate surgical treatment.</p> <ul style="list-style-type: none"> Do not point dispensing device at anyone or at any part of the body. Do not put your hand over the fluid outlet. Do not stop or deflect leaks with your hand, body, glove, or rag. Follow the Pressure Relief Procedure when you stop dispensing and before cleaning, checking, or servicing equipment. Tighten all fluid connections before operating the equipment. Check hoses and couplings daily. Replace worn or damaged parts immediately.
<div style="display: flex; flex-direction: column; gap: 10px;">   </div>	<p>EQUIPMENT MISUSE HAZARD</p> <p>Misuse can cause death or serious injury.</p> <ul style="list-style-type: none"> Do not operate the unit when fatigued or under the influence of drugs or alcohol. Do not exceed the maximum working pressure or temperature rating of the lowest rated system component. See Technical Specifications in all equipment manuals. Use fluids and solvents that are compatible with equipment wetted parts. See Technical Specifications in all equipment manuals. Read fluid and solvent manufacturer's warnings. For complete information about your material, request Safety Data Sheets (SDSs) from distributor or retailer. Do not leave the work area while equipment is energized or under pressure. Turn off all equipment and follow the Pressure Relief Procedure when equipment is not in use. Check equipment daily. Repair or replace worn or damaged parts immediately with genuine manufacturer's replacement parts only. Do not alter or modify equipment. Alterations or modifications may void agency approvals and create safety hazards. Make sure all equipment is rated and approved for the environment in which you are using it. Use equipment only for its intended purpose. Call your distributor for information. Route hoses and cables away from traffic areas, sharp edges, moving parts, and hot surfaces. Do not kink or over bend hoses or use hoses to pull equipment. Keep children and animals away from work area. Comply with all applicable safety regulations.

WARNING



MOVING PARTS HAZARD

Moving parts can pinch, cut or amputate fingers and other body parts.



- Keep clear of moving parts.
- Do not operate equipment with protective guards or covers removed.
- Equipment can start without warning. Before checking, moving, or servicing equipment, follow the **Pressure Relief Procedure** and disconnect all power sources.



PERSONAL PROTECTIVE EQUIPMENT

Wear appropriate protective equipment when in the work area to help prevent serious injury, including eye injury, hearing loss, inhalation of toxic fumes, and burns. Protective equipment includes but is not limited to:

- Protective eyewear, and hearing protection.
- Respirators, protective clothing, and gloves as recommended by the fluid and solvent manufacturer.

Component Identification

NOTICE

To prevent damage to soft key buttons, do not press the buttons with sharp objects such as pens, plastic cards, screwdrivers, or fingernails.

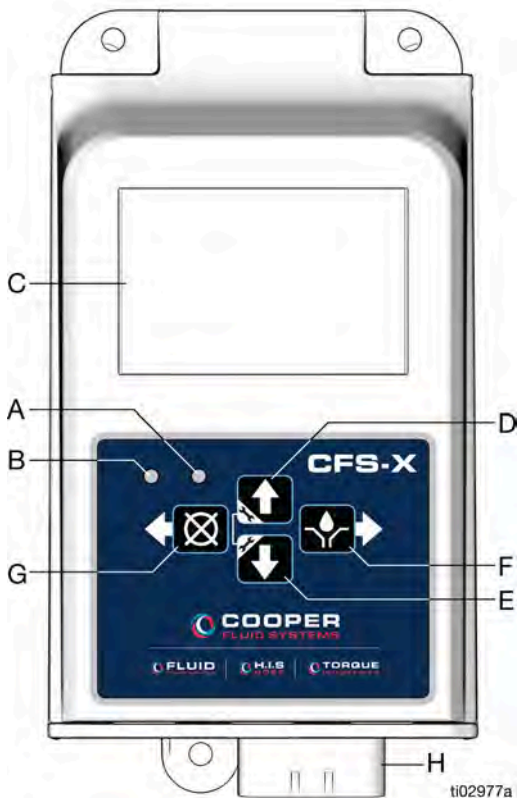


Fig. 1: CFS-X Controller Front

- A System LED
- B Low Level Status LED
- C Display
- D UP Arrow
- E DOWN Arrow
- F RIGHT Arrow / ENTER
- G LEFT Arrow / Reset
- H Connector AMP TE14

System LED (A)

Light	Status
Red (solid)	Normal and ON
Orange (solid)	Controller is in system SETUP and lubrication program is paused
Red (flashing)	System is in alarm

Low Level Status LED (B)

Light	Status
Orange (solid)	Low level alert
Flashing	Another alarm in addition to a low level alert

UP and DOWN Direction Arrows (D and E)

Press and hold both the UP and DOWN ARROW keys simultaneously for 3 seconds to enter SETUP.

RIGHT Direction Arrow / MANUAL RUN / ENTER (F)

In SETUP the RIGHT Arrow saves the entry or selects a menu choice.

When not in SETUP, the RIGHT Arrow starts the pump for one complete lubrication event.

Holding down both the RIGHT Arrow and the LEFT Arrow simultaneously for 3 seconds starts TEST MODE.

LEFT Direction Arrow / Reset (G)

In SETUP the LEFT Arrow moves the cursor in the display one field to the left. It also navigates back to the previous screen and cancels parameter change.

If the pump is lubricating, pressing this button cancels the event and the pump stops lubricating.

In ALARM, press the LEFT Arrow once to clear the buzzer. Press and hold for 3 seconds to clear the alarm. For more information, see **Alarms**, page 17.

Holding down both the RIGHT Arrow and the LEFT Arrow simultaneously for 3 seconds starts TEST MODE.

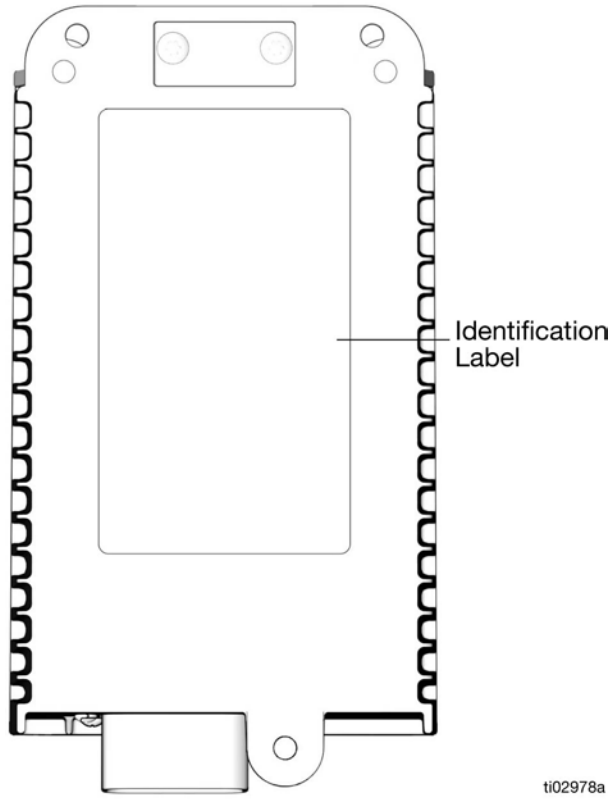


FIG. 2: CFS-X Controller Back

Typical Installation

The installation shown in FIG. 3 is only a guide for selecting and installing system components.

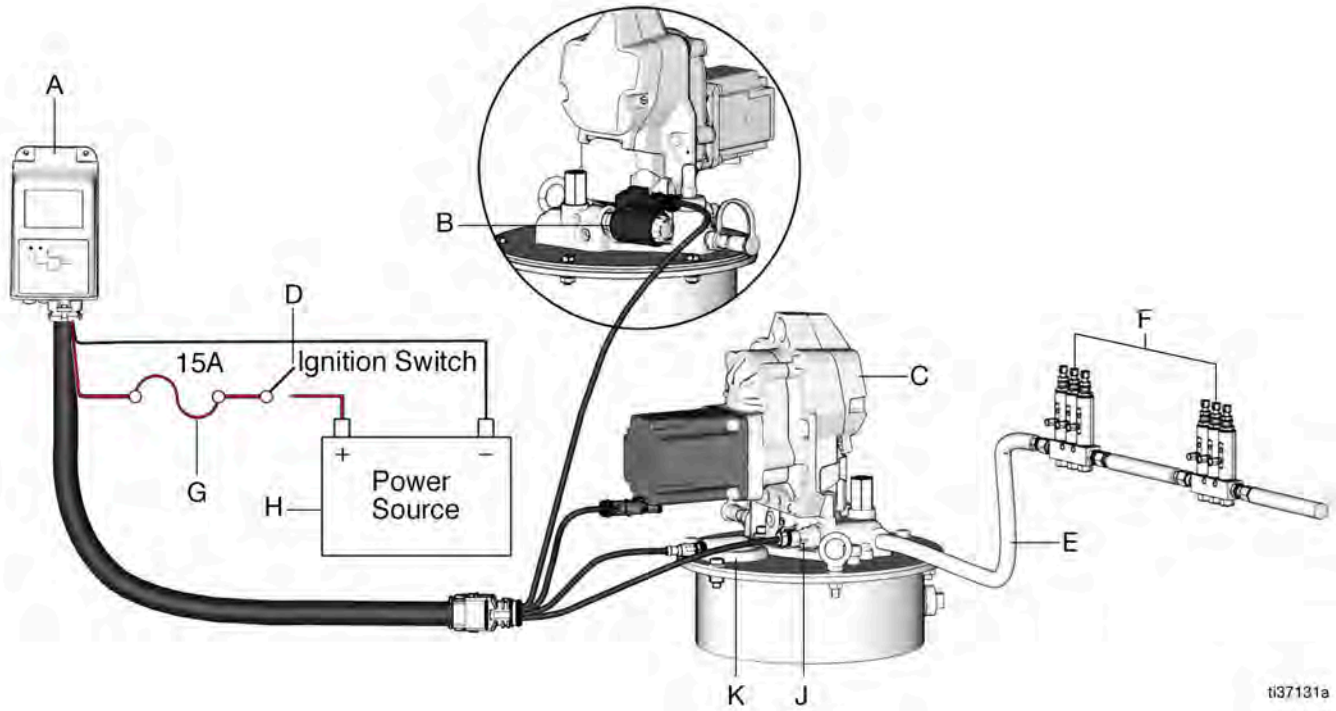


FIG. 3: Typical Installation

Key:

- | | |
|--|--------------------|
| A Lubrication Controller | F Injector Banks |
| B Solenoid Valve | G In-line 15A Fuse |
| C Pump Module | H Power Source |
| D Ignition Switch | J Pressure Sensor |
| E High Pressure Lubricant Supply Lines | K Level Sensor |

System Configuration

To determine the required configurations needed, refer page XX.

Injector System

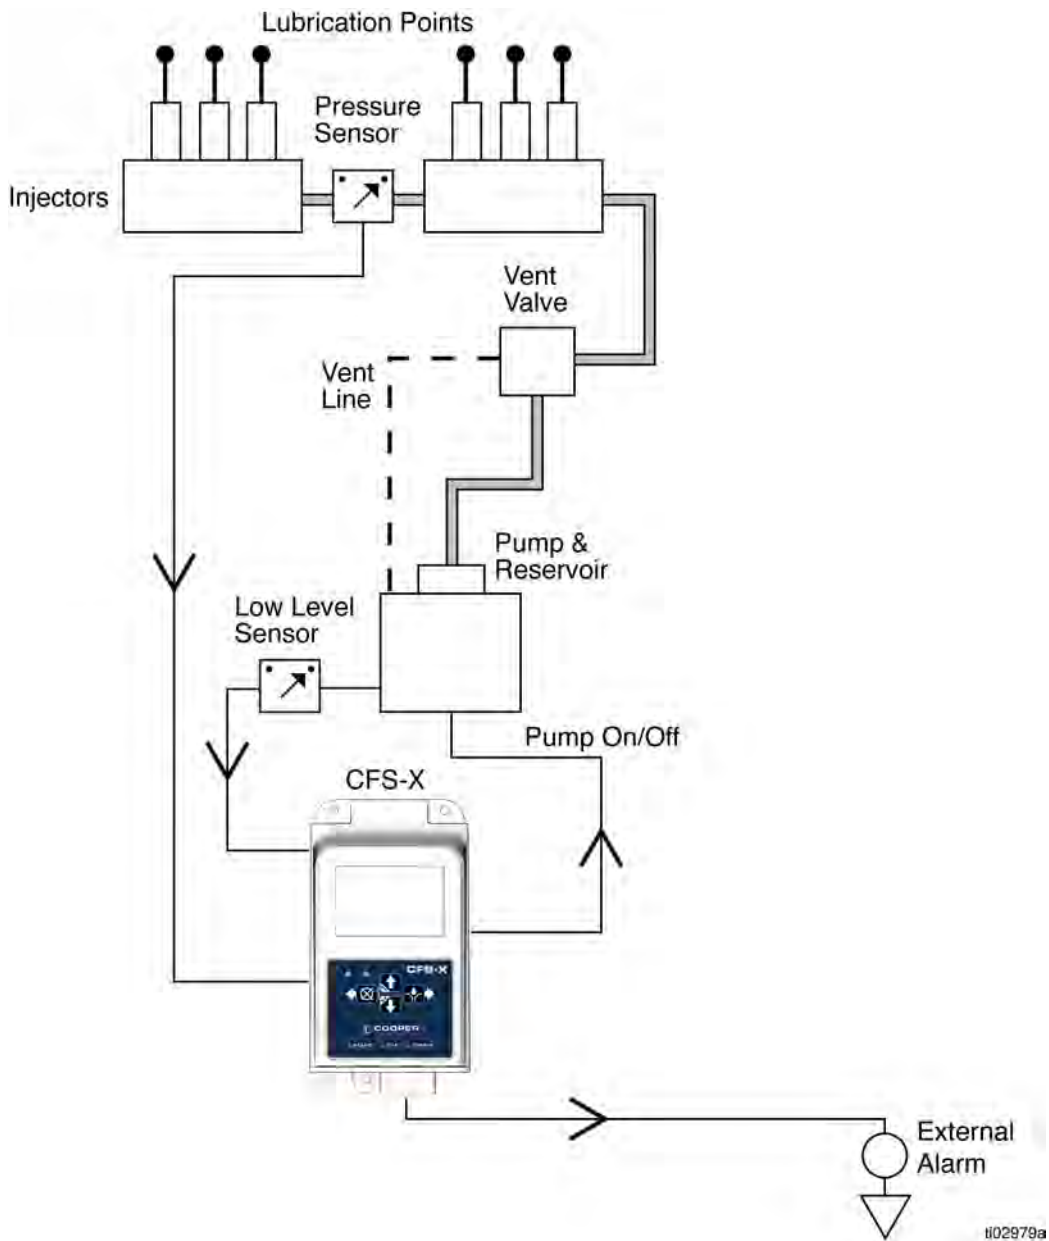


FIG. 4 Injector System Configuration

Divider Valve

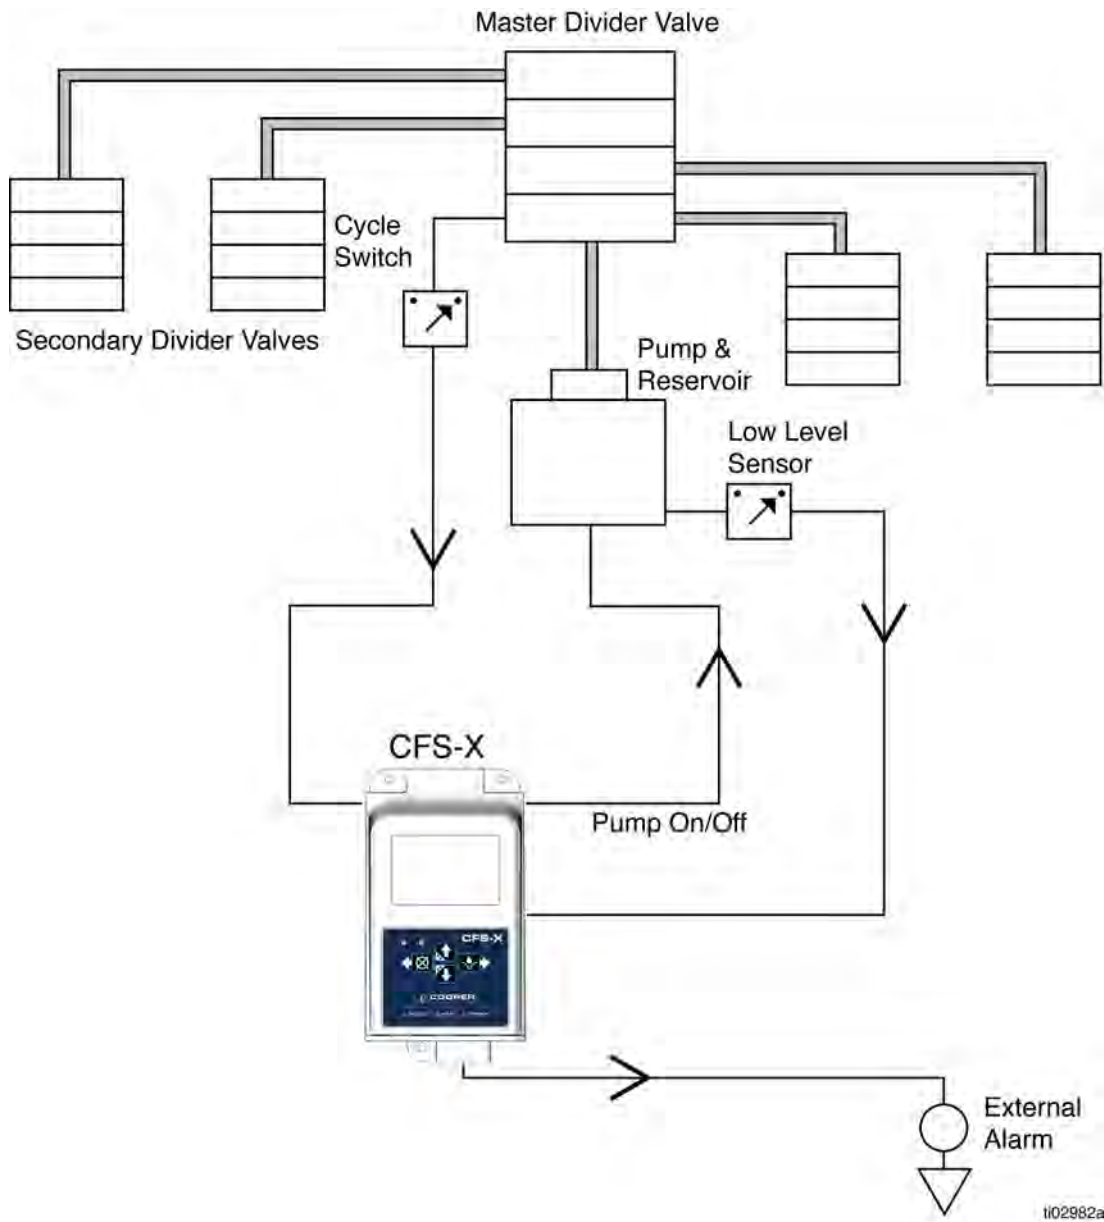


FIG. 5 Divider Valve System Configuration

Installation



AUTOMATIC SYSTEM ACTIVATION HAZARD

Unexpected activation of the pump lubrication system could result in serious injury, including skin injection and amputation.

The Lubrication Controller has an automatic timer that activates the pump lubrication system when power is connected or when exiting this device's programming function. Before you install or remove the Lubrication Controller from the system, disconnect and isolate all system power supplies and relieve pressure for all system components.

NOTICE

Pre-drill and use only designated mounting holes in Lubrication Controller box. Failure to use designated mounting holes can cause circuit board damage.

Mounting

1. Select a flat surface to install the Lubrication Controller. Drill mounting holes, refer to **Mounting Hole Layout**, page 23.
2. Align the junction box with the pre-drilled holes (FIG. 6). Secure the junction box to the mounting surface with three screws (not provided).

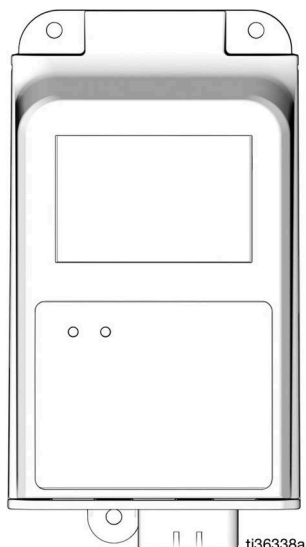


FIG. 6 Pre-drilled holes

Wiring

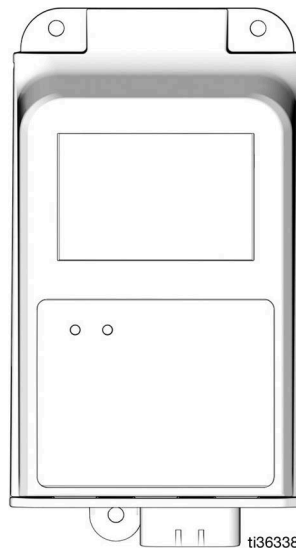


FIG. 7: Lubrication Controller Connector

- Output voltage is the same as the input voltage.

NOTICE

The pump is designed for 10 A. The auxiliary outputs are designed for 10 A.

The entire system, however, is only capable of delivering a total of 15 A.

Therefore, if the pump is a 10 A load, the sensors and auxiliary output must not exceed 5 A.

- The Lubrication Controller is designed to power a pump or to provide an enable signal to a pump.
- **Sensor Wiring Configurations** are located on page 25.
- **Wiring Diagram** is located on page 24.

Setup

Navigating Setup and Data Entry

UP and DOWN Arrows:

- Press both the UP and DOWN Arrows simultaneously for 3 seconds to enter SETUP.



- Use the UP and DOWN Arrows to navigate screens in the up or down direction.

- Use these buttons to adjust parameters and data values.

RIGHT Arrow:

- Use this button to move the cursor to the right or to select menu items.



- Use this button to save any parameter changes.

LEFT Arrow:

- Use this button to move the cursor to the left.



- Use this button to navigate to the previous screen. This cancels any parameter change made.

Change Settings

Press both the UP and DOWN Arrow buttons simultaneously for three seconds to enter SETUP and to change settings.

Note: Setting changes are not saved until Accept is selected.

While in SETUP, if a button is not pushed for 1 minute the Lubrication Controller returns to idle.

Mode

Choose either Interval or End On, but both must be set up before the Lubrication Controller will be configured for your application.

Interval

Configures how frequently the CFS-X lubricates the product.

- Select either Timer Interval or Machine Count Interval.

Timer Interval

This sets up how frequently lubrication occurs.

- Interval: defines the time between lubrication events.

The idle time shows interval time minus the lubrication time. If the interval time is 30 minutes and the lubrication time is 1 minute, then after a lubrication event the idle time is 29 minutes. The lubrication events will then be spaced by 30 minutes (Interval Time).

Machine Count Interval

This configures the device to wait for a specific number of machine actions between lubrication events.

The actions must be presented to the device as a machine count input. This is a digital signal input, similar to a proximity switch that would be used for Cycle mode.

- Timeout Option: enables/disables an interval backup timeout.
- Interval: when timeout is enabled, this feature defines the backup timeout for machine count.
- Timeout Action: select the action taken (either Lube or Alarm) when a machine count timeout occurs.

Lube: the lubrication event starts if the target machine counts do not occur within the user defined time.

Alarm: an alarm occurs if the targeted machine counts do not occur within the user defined time.

End On

Configures when a lubrication event ends. Selects the method the controller uses to transition from lubrication to idle.

End on, Pressure Sensor

The lubrication event ends when the system reaches a specific pressure. This is commonly used with Single Line Parallel (Injector) systems using a pressure switch.

- Alarm: defines maximum time to reach target pressure.
- Type: select the type of pressure sensor output: 0.5-4.5 V, 0-5V, 1-5 V, 0-10 V, and 4-20 mA.
- Units: select the units label to display with the pressure measurement: kPa, Percent, PSI, and bar.
- Full Scale: the maximum sensor output reading. For example, if a 0-10 V sensor is 5000 psi at full scale, then 10 V = 5000 psi.
- Threshold: the target pressure the system must reach to end the lubrication event.

End on, Pressure Switch

The lubrication event ends when the system reaches a specific pressure. This is commonly used with Single Line Parallel (Injector) systems using a pressure switch.

The pressure switch must be physically set to the appropriate target pressure.

- Alarm Timeout: defines the maximum allowable time to reach target pressure.

End on, Cycles

The lubrication event ends after a number of pulsed inputs from a cycle counter. This is commonly used with Series Progressive (Divider Block) systems.

- Count: defines the number of cycle inputs required per lubrication event.

- Alarm Timeout: defines the maximum allowable time to accumulate cycle counts.
- Solenoid Failure Alarm: if enabled, an alarm displays if cycle inputs are detected during idle time.

End on, Timer

The lubrication event ends after a specified amount of time.

- Timeout: defines the amount of time that the system is lubricating.

Low Level

The pump stops lubricating when low level is detected. To define low level, enter SETUP, select low level, and then select Type: Paddle, Switch, or Sensor.

Paddle

Used with “paddle-style” low level sensors.

- Alert: Enable/disable low level Alert.
- Alert Count: Number of low level triggers to cause Alert. Recommended setting for Alert Count is 10 triggers.
- Alarm: Enable/disable low level Alarm.
- Alarm Count: Number of low level triggers to cause alarm. Recommended setting for Alarm Count is 80 triggers.
- Auto-Clear: when in a Low Level Alarm state, the controller attempts to lubricate automatically upon powering up.
- If within 30 seconds of entering run mode a low level trigger is not detected, the count resets to 0.

Note: The Low Level paddle uses pin 12 of the CFS-X controller. Review **Wiring Key**, page 24.

Switch

Defines the low level input as a dry-contact (or source style) switch that triggers when a low level is detected.

- **Type:** defines the actions upon low level detection.

Alert: the low level LED turns on. Output two turns on.

Alarm: enters an alarm state and stops lubricating. The low level LED turns on and the screen shows an alarm screen.

Sensor

Defines the low level input as a continuous monitoring sensor. The level is displayed as a percentage (%).

- **Sensor Type:** select the type of level sensor output: 0,5-4,5V, 0-5 V, 1-5 V, 0-10 V, and 4-20 mA.
- **Alert:** Enables a low level Alert. In Alert, the low level LED turns on. Output 2 turns on.
- **Alert %:** the level that triggers a low level Alert.
- **Alarm:** Enables a low level Alarm. In Alarm, the system stops lubrication. The low level LED flashes, and the screen shows an alarm screen.
- **Alarm %:** The level that triggers a low level Alarm.

For Version 1.02.002 and earlier: Disable the Low Level Alert or Alarm by setting the threshold to zero.

Lock

The controller does not require a PIN to access the programming features of the unit. However, an option for adding PIN lock out is available.

Enable a Lock out PIN

Navigate to the menu item lock.

- **Lock:** toggles on/off Lock out PIN protection.
- **PIN:** enter a 4 digit code to unlock the device.

If a lockout PIN is enabled, a PIN must be used to change settings.

Entering a PIN

When entering SETUP, the PIN entry screen appears with the first digit highlighted. Use the arrow buttons to enter the PIN.

After entering the last digit, press the RIGHT ARROW button to accept the PIN.

If the PIN is correct, the device enters SETUP.

If the PIN is incorrect, the device returns to the main screen.

Start Up

Navigate to the menu item start up.

- **Pre-lube:** configures the CFS-X to start a lubrication event once powered on.
- **Delay:** enables a delay between when the device is powered on and when the controller resumes.
 - **Delay Time:** if applicable, configures the delay time.

Output 2

Assign as alarm output or vent valve output.

- **Alarm & Alert:** active on Alarm or Alert.
- **Alarm:** active on Alarms only.
- **Alert:** active on Alerts only.
- **Vent Valve:** active during a lubrication event.

System

In addition to date and time, enabling Bluetooth® and disabling an audible alarm are found under this heading.

Date and Time

Navigate to the menu item time.

- **Date:** defines today's date.
- **Time:** defines the current time. This clock runs on a 24 hour clock. (9 a.m. = 9, 2 p.m. = 14)

Program Settings

Feature	Description	Modes of Operation Maximum/Minimum and Additional Comments
Interval , page 12	Mode	Timer Machine Count
	Machine Count	1 to 10,000
	Machine Count Options	<ul style="list-style-type: none"> - Action to start lubrication or alarm when timeout expires - Enable a backup timeout
	Interval	HH:MM (00:01 to 99:59) Defines time between lubrication events
End On , page 13	Mode	Timer, Pressure Switch, Pressure Sensor, Cycle
	Timeout	HH:MM:SS (00:00:10 to 03:00:00)
	Pressure Type	0-5V, 0-10V, 1-5V, 4-20mA
	Pressure Sensor Units	PSI, kPa, bar, percent
	Pressure Sensor Full Scale	1 to 20,000 Requires: Threshold is less than or equal to Full Scale
	Pressure Sensor Threshold	1 to 20,000 Requires: Threshold is less than or equal to Full Scale
	Pressure Sensor Target	1 to 20,000 Requires: Threshold is less than or equal to Full Scale
	Cycles	0 to 100
	Cycle Option Solenoid Alarm	Enables alarm when cycles are detected during idle time
Low Level , page 13	Low Level Type	Paddle, Low Level Switch, Low Level Sensor
	Paddle Low Level Alert Threshold	Recommended: 10 00 to 99 Requires Alarm > Alert Setting of zero disables low level alert threshold
	Paddle Low Level Alarm Threshold	Recommend: 80 00 to 99 Requires: Alarm > Alert Setting of zero disables low level alarm threshold
	Paddle Alarm Auto-Clear	Enables a feature that will automatically clear a low level alarm and start a lubrication event to check if the reservoir is still empty
	Level Switch Type	Sets low level behavior as low level Alert or low level alarm
	Sensor Type	0-5V, 0-10V, 1-5V, 4-20mA
	Sensor Alert Threshold	0 - 100 Requires: Alarm < Alert Setting of zero disables low level alert threshold
	Sensor Alarm Threshold	0 - 100 Requires: Alarm < Alert Setting of zero disables low level alarm threshold
Start Up , page 14	Delay Time	MM:SS (00:01 to 59:59)
Output 2 , page 14	Output Type	Activated pm Alarm, only, Alert only, Alarm and Alerts, or to close Vent Valve
System , page 14	Date	Month: 1 - 12 Day: 1 - 31 Year: 18 - 99
	Time	00:00:00 to 23:59:59 24-hour time

Operation

Main Screens

Refer to the following illustrations for examples of typical operation screens.

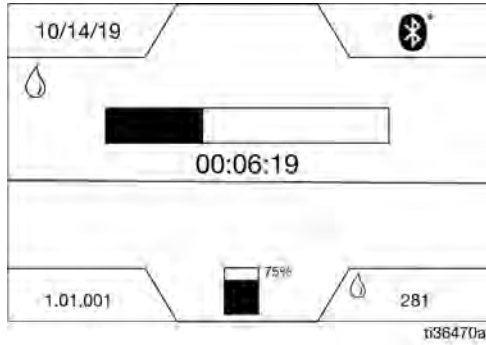


FIG. 8 Lubrication Event: Pressure Switch

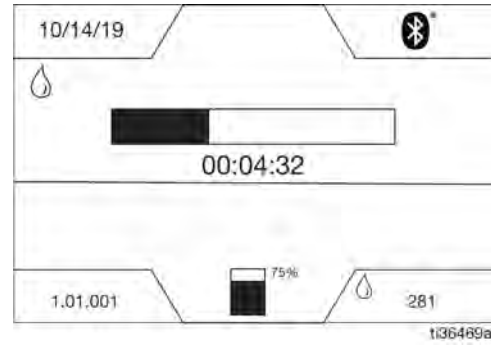


FIG. 11 Lubrication Event: Time

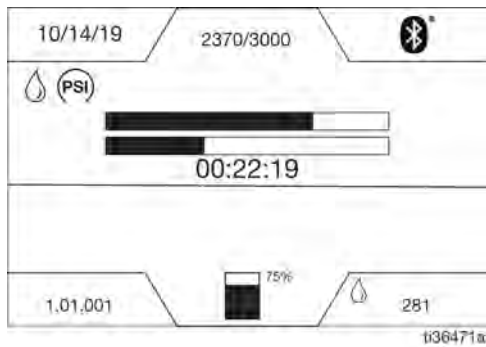


FIG. 9 Lubrication Event: Pressure Sensor

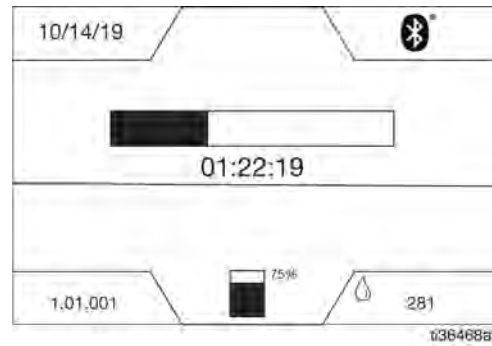


FIG. 12 Idle: Timer

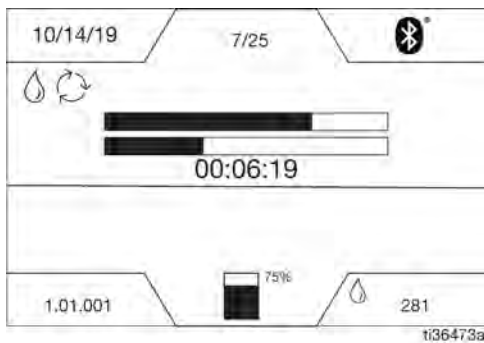


FIG. 10 Lubrication Event: Cycle

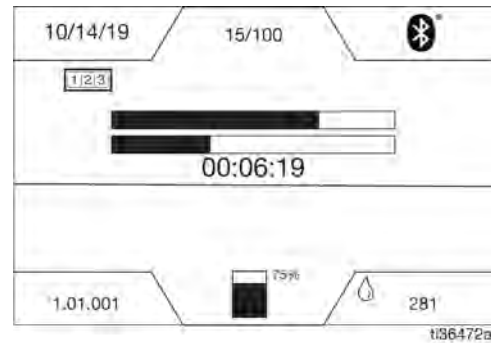


FIG. 13 Idle: Machine Count

Test Mode

On the main screen press and hold both the LEFT and RIGHT ARROWS simultaneously for 3 seconds to enter TEST MODE.

While in TEST MODE the controller:

End Configuration	ON time (min)	OFF time (min)
Pressure System	7	1
Timer System	2	1
Cycle System	2	1

TEST MODE ends after 10 lubrication events. TEST MODE is canceled by pressing the LEFT ARROW button.

Alarms

During an alarm:

- Pump operation is immediately disabled
- The system LED flashes red
- An alarm screen displays
- An audible alarm sounds
- Output 2 turns on

Press the reset button (LEFT ARROW button) once to clear the buzzer.

Press and hold the reset button for 3 seconds to clear the alarm and switch the controller to idle.



Low Level Alert State

- Run mode continues
- Low level LED is on (B, FIG. 1)
- System LED is on (A, FIG. 1)
- Output 2 in ON

Low Level Alarm State

- Pump operation is immediately disabled
- Low level LED is on (B, FIG. 1)
- System LED flashes red (A, FIG. 1)
- Output 2 is ON
- Audible alarm
- Screen shows alarm information

Clear Alarm Buzzer

Press reset (LEFT ARROW button) to silence the buzzer.

The buzzer sounds again after 4 hours if the low level condition is not resolved. The buzzer also sounds again when power is cycled.






Clear Low Level Alarm


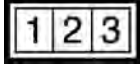
Filling the reservoir resolves a low level sensor and low level switch condition, and the level sensor and level switch will self-clear.

Hold the reset button for at least 5 seconds to remove the low level alarm from the controller.

For more details regarding a specific alarm, see **Alarm Types**, page 18 and **Troubleshooting**, page 21.

Alarm Types

Alarm ID	Alarm Type	Alarm Icon	Cause	Solution
A13	Level Empty		There is a low lubricant level	Fill the reservoir.
A11	Cycle Timeout		The time out expired before receiving programmed number of cycle counts.	<p>Inspect the lubrication system for broken or plugged lines.</p> <p>Confirm that the pump is operating correctly.</p> <p>Inspect the cycle and proximity switch and wiring.</p> <p>Confirm that sufficient time was programmed for the environmental conditions (e.g. slow system response in cold temperatures).</p> <p>Confirm that the programming is correct.</p>
A15	Pressure Timeout		The time out expired prior to receiving pressure switch input.	<p>Inspect the lubrication system for broken or plugged lines.</p> <p>Confirm that the pump is operating correctly.</p> <p>Confirm that the vent valve is operating correctly</p> <p>Inspect the wiring, pressure, switch, and sensor.</p> <p>Confirm that sufficient time was programmed for the environmental conditions (e.g. slow system response in cold temperatures).</p> <p>Confirm that the programming is correct.</p>
A16	Pressure not vented		<p>The vent valve failed to relieve pressure to the system.</p> <p>Pressure Switch is showing as a closed switch, or the sensor is above the pressure threshold when the lubrication cycle started.</p>	<p>Fix the cabling to the vent valve.</p> <p>Ensure that enough power is being delivered to the vent valve.</p> <p>Confirm that the controller settings are correct.</p> <p>Replace the vent valve if it is broken.</p> <p>Inspect the wiring, pressure switch and sensor, and check for short circuits.</p> <p>Confirm that the controller settings are correct.</p>
A19 (Pin 2) A20 (Pin 1) A21 (Pin 4) A22 (Pin 5)	Output Overcurrent		Output load is drawing too much current	<p>Inspect the wiring.</p> <p>Confirm that the pump is operating correctly and not drawing more current than expected.</p>

Alarm ID	Alarm Type	Alarm Icon	Cause	Solution
A17 (INPUT 1) A18 (INPUT 2)	Sensor Fault		Sensor input is out of range for given type	Inspect the sensor and wiring. Confirm that the programming is correct.
A14	Machine Count Timeout		The machine use is low. The cabling to machine count is broken.	Confirm that the controller settings are correct for machine usage.
A23	Solenoid Failure	No Symbol	The solenoid valve used to control the lubrication flow has failed.	Replace the solenoid valve used to control lubrication flow.
A12	Generic Input	No Symbol	The user defined input is active and requires attention.	Resolve the system issue. Clear the alarm when the system issue is resolved.

Recycling and Disposal

End of Product Life

At the end of the product's useful life, dismantle and recycle it in a responsible manner.

Dismantle and recycle:

- Remove motors, circuit boards, LCDs (liquid crystal displays), and other electronic components. Recycle according to applicable regulations.
- Do not dispose of batteries or electronic components with household or commercial waste.



- Deliver remaining product to a recycling facility.

Troubleshooting




Follow the Pressure Relief Procedure detailed in your pump manual before working on the lubrication system, pump, or lubrication lines.

NOTE: Check all possible problems and causes before disassembling the equipment.

Problem	Cause	Solution
Display or LED does not come on	Incorrect or loose wiring	Refer to Installation , page 11.
	Input voltage is out of range	Confirm that the power source is between 9 and 30 VDC.
	Tripped external fuse	Confirm that none of the devices or wiring connected to the controller are causing a short circuit connection. If necessary, replace fuse.
Pump is not running during lubrication event	Incorrect or loose wiring	Confirm current is being delivered to the pump during a lubrication event. Verify that your machine has been wired correctly. Refer to Installation , page 11.
	Controller output is incorrect	Confirm output voltage (Pump Output +) from controller during lubrication event is correct (should be similar to input voltage). If controller output voltage is never present, the device may need replacement.
		Measure at controller to ensure there is not a wiring issue causing the problem.
Reservoir runs out of grease quickly and unexpectedly	TEST MODE is engaged	Turn off TEST MODE.
	There is a leak	Check reservoir and lines for leaks.
Always in low level	Review ground difference between the CFS-X and the switch or sensor	Rewire if necessary.


Dimensions

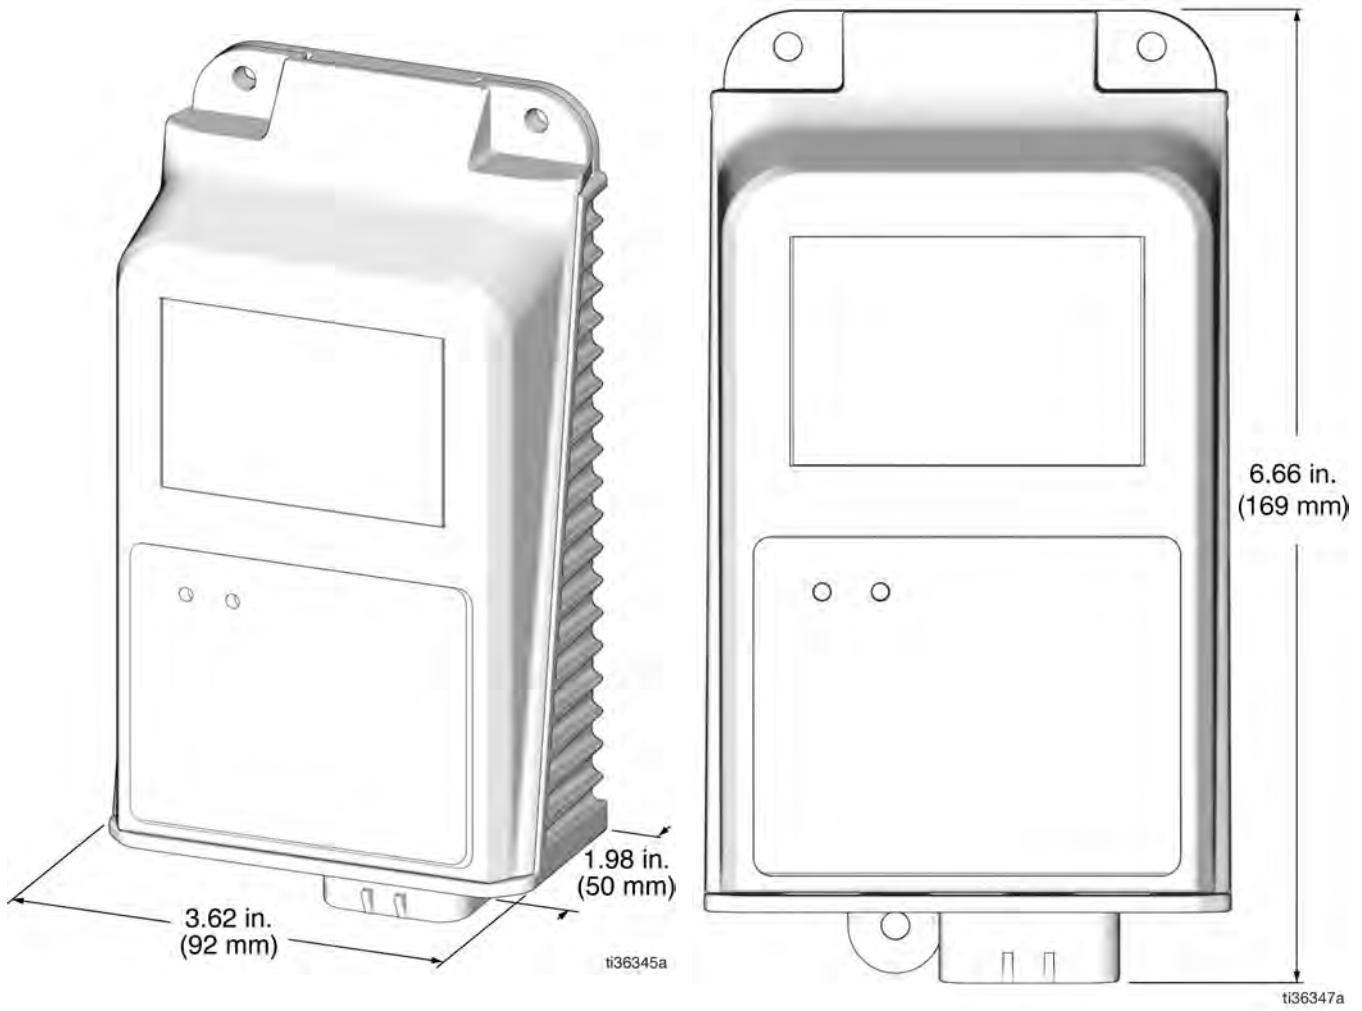

Mounting Hole Layout

NOTICE

Pre-drill and use only designated mounting holes in Lubrication Controller box. Failure to use designated mounting holes can cause circuit board damage.

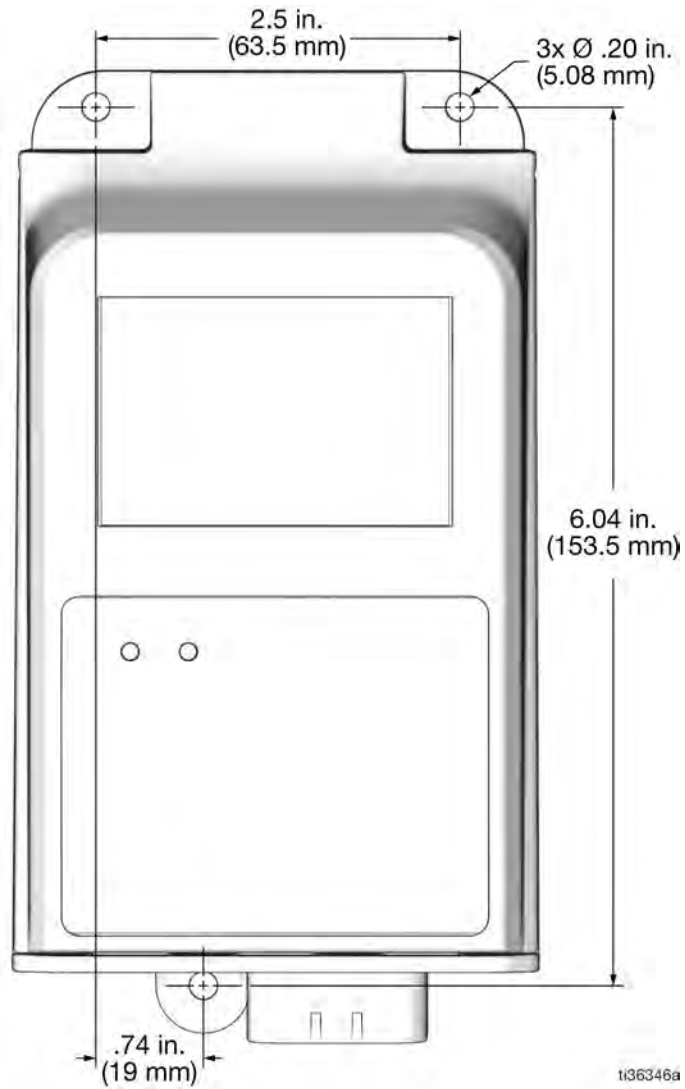

Electrical Schematics

Wiring Diagram


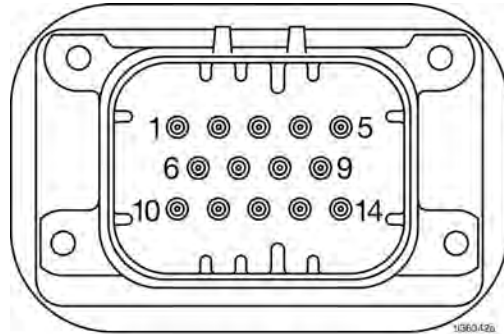


FIG. 14: Wiring Diagram

Wiring Key

Pin	Description	Polarity
1	Pump / Motor	+
2	Auxiliary / Alarm	+
3	Pump / Motor ground	-
4	Sensor power 1	+
5	Sensor power 2	+
6	Voltage source	+
7	Auxiliary / Alarm ground	-
8	Input 2 ground	-
9	Input 2 (LOW LEVEL)	Input
10	Voltage source ground	-
11	Input 3 (CYCLE)	Input
12	Input 4 (MACHINE COUNT/PADDLE)*	Input
13	Input 1 ground	-
14	Input 1 (PRESSURE)	Input

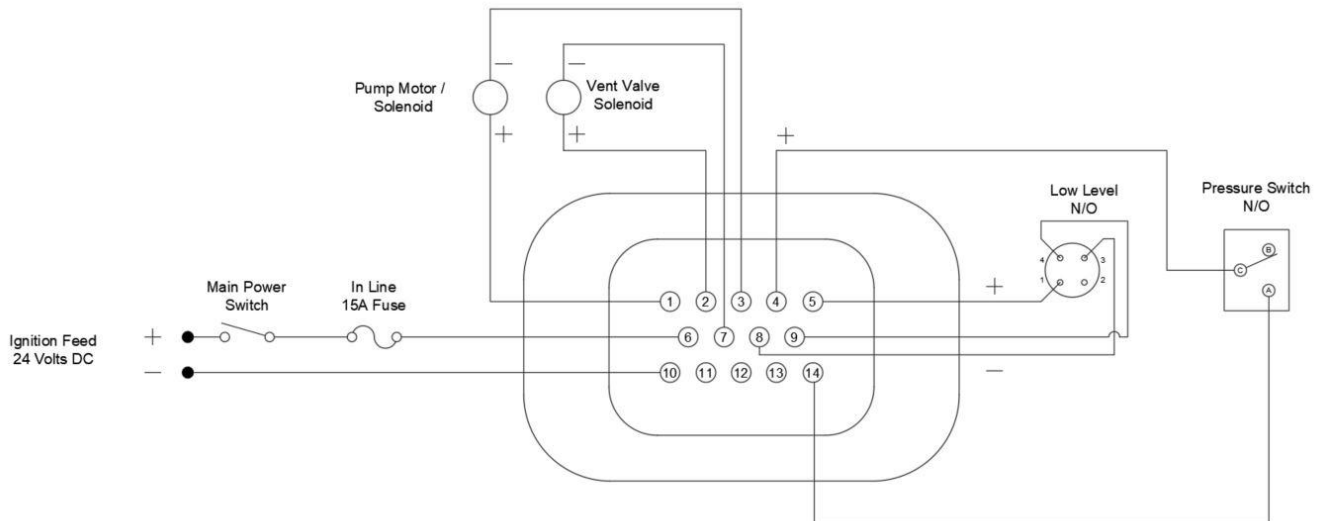

Sensor Wiring Configurations

Dry Contact Switch

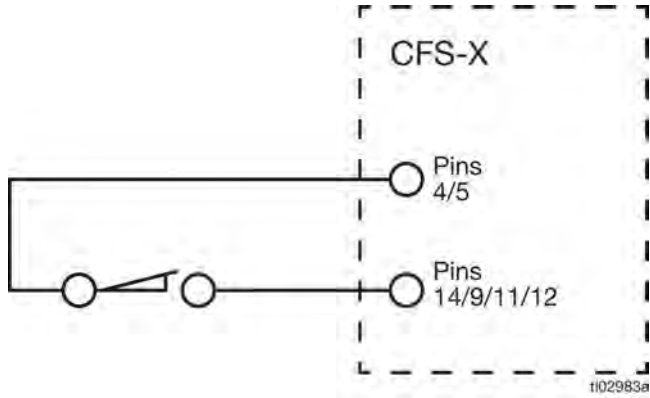


FIG. 15

Source/PNP Switch (2 or 3 Wire Type)

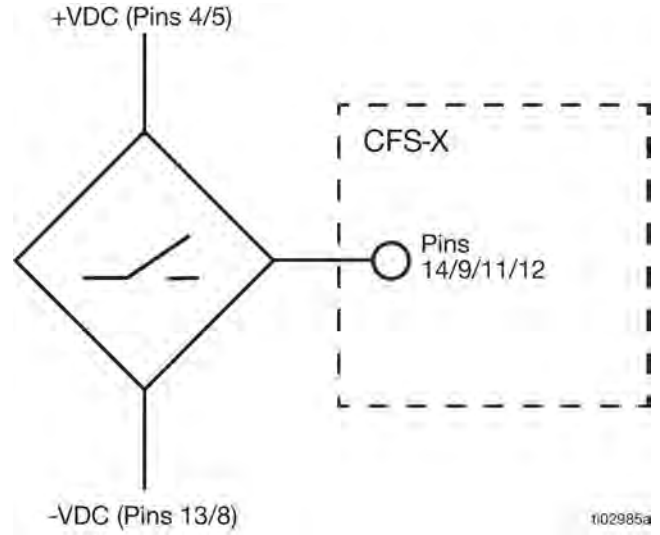


FIG. 17

Analog Sensor

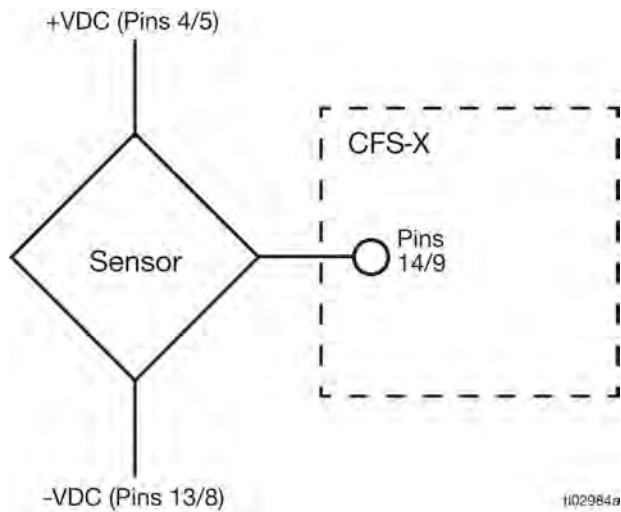


FIG. 16

Technical Specifications

CFS-X Controller		
	US	Metric
Climate		
Operating Temperature Range	-22 F° to 158 F°	-30 C° to 70 C°
Storage Temperature	-22 F° to 158 F°	-30 C° to 70 C°
Maximum Humidity	90% RH (non-condensing)	
Materials of Constructions		
Enclosure Material	ABS	
Membrane Material	Polyester	
Lens Material	Polycarbonate	
Input Contact		
Power Source DC	9 - 30 VDC	
Power Consumption	1 W (no load), 15 A (max)	
Outputs*		
Pump Control		
Max Switching Voltage	30 VDC	
Max Switching Current	10 A	
Auxiliary		
Max Switching Voltage	30 VDC	
Max Switching Current	10 A	
Inputs 1 and 2		
Maximum Analog Voltage Input	10 V	
Inputs 3 and 4		
Maximum input rate	300 rpm	
Noise (dBa)		
Maximum sound pressure	Less than 70 dB	
Miscellaneous Data		
IP Rating	IP69K	
Bluetooth LE	1 mW	
Altitude	<2000m	

All trademarks or registered trademarks are the property of their respective owners.

*Total current from all outputs maximum is 15 A.

Compliance

Radio Frequency Approvals


Transmitter Frequency: 2.4 GHz
Transmitter Power: +0 dBm

NOTE: FCC/IC Notice (all models)
Contains FCC ID: A8TBM7152
Contains IC: 12246A-BM7152

The enclosed device complies with Part 15 of the FCC Rules and with the Industry Canada license-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause harmful interference and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment is not granted protection against harmful interference and cannot cause interference on systems property authorized.

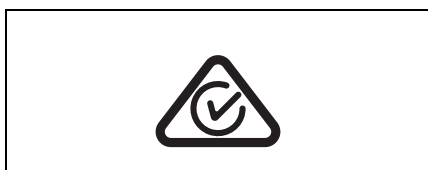

California Proposition 65

CALIFORNIA RESIDENTS

 **WARNING:** Cancer and reproductive harm – www.P65warnings.ca.gov.

Warranty

Cooper Fluid Systems warrants all equipment referenced in this document which is manufactured by Cooper Fluid Systems and bearing its name to be free from defects in material and workmanship on the date of sale to the original purchaser for use. With the exception of any special, extended, or limited warranty published by Cooper Fluid Systems, Cooper Fluid Systems will, for a period of twelve months from the date of sale, repair or replace any part of the equipment determined by Cooper Fluid Systems to be defective. This warranty applies only when the equipment is installed, operated and maintained in accordance with Cooper Fluid Systems' written recommendations.

This warranty does not cover, and Cooper Fluid Systems shall not be liable for general wear and tear, or any malfunction, damage or wear caused by faulty installation, misapplication, abrasion, corrosion, inadequate or improper maintenance, negligence, accident, tampering, or substitution of non-Cooper Fluid Systems component parts. Nor shall Cooper Fluid Systems be liable for malfunction, damage or wear caused by the incompatibility of Cooper Fluid Systems equipment with structures, accessories, equipment or materials not supplied by Cooper Fluid Systems, or the improper design, manufacture, installation, operation or maintenance of structures, accessories, equipment or materials not supplied by Cooper Fluid Systems.

This warranty is conditioned upon the prepaid return of the equipment claimed to be defective to an authorized Cooper Fluid Systems distributor for verification of the claimed defect. If the claimed defect is verified, Cooper Fluid Systems will repair or replace free of charge any defective parts. The equipment will be returned to the original purchaser transportation prepaid. If inspection of the equipment does not disclose any defect in material or workmanship, repairs will be made at a reasonable charge, which charges may include the costs of parts, labor, and transportation.

THIS WARRANTY IS EXCLUSIVE, AND IS IN LIEU OF ANY OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO WARRANTY OF MERCHANTABILITY OR WARRANTY OF FITNESS FOR A PARTICULAR PURPOSE.

Cooper Fluid Systems' sole obligation and buyer's sole remedy for any breach of warranty shall be as set forth above. The buyer agrees that no other remedy (including, but not limited to, incidental or consequential damages for lost profits, lost sales, injury to person or property, or any other incidental or consequential loss) shall be available. Any action for breach of warranty must be brought within two (2) years of the date of sale.

COOPER FLUID SYSTEM MAKES NO WARRANTY, AND DISCLAIMS ALL IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, IN CONNECTION WITH ACCESSORIES, EQUIPMENT, MATERIALS OR COMPONENTS SOLD BUT NOT MANUFACTURED BY Cooper Fluid Systems. These items sold, but not manufactured by Cooper Fluid Systems (such as electric motors, switches, hose, etc.), are subject to the warranty, if any, of their manufacturer. Cooper Fluid Systems will provide purchaser with reasonable assistance in making any claim for breach of these warranties.

In no event will Cooper Fluid Systems be liable for indirect, incidental, special or consequential damages resulting from Cooper Fluid Systems supplying equipment hereunder, or the furnishing, performance, or use of any products or other goods sold hereto, whether due to a breach of contract, breach of warranty, the negligence of Cooper Fluid Systems, or otherwise.

All written and visual data contained in this document reflects the latest product information available at the time of publication. Cooper Fluid Systems reserves the right to make changes at any time without notice.

Original instructions. *This manual contains English. MM 3A9528*

Cooper Fluid Systems
25 Redcliffe Rd. • Redcliffe WA 6104 • Australia
Telephone: 1300 026 673

Copyright 2024, September 2024